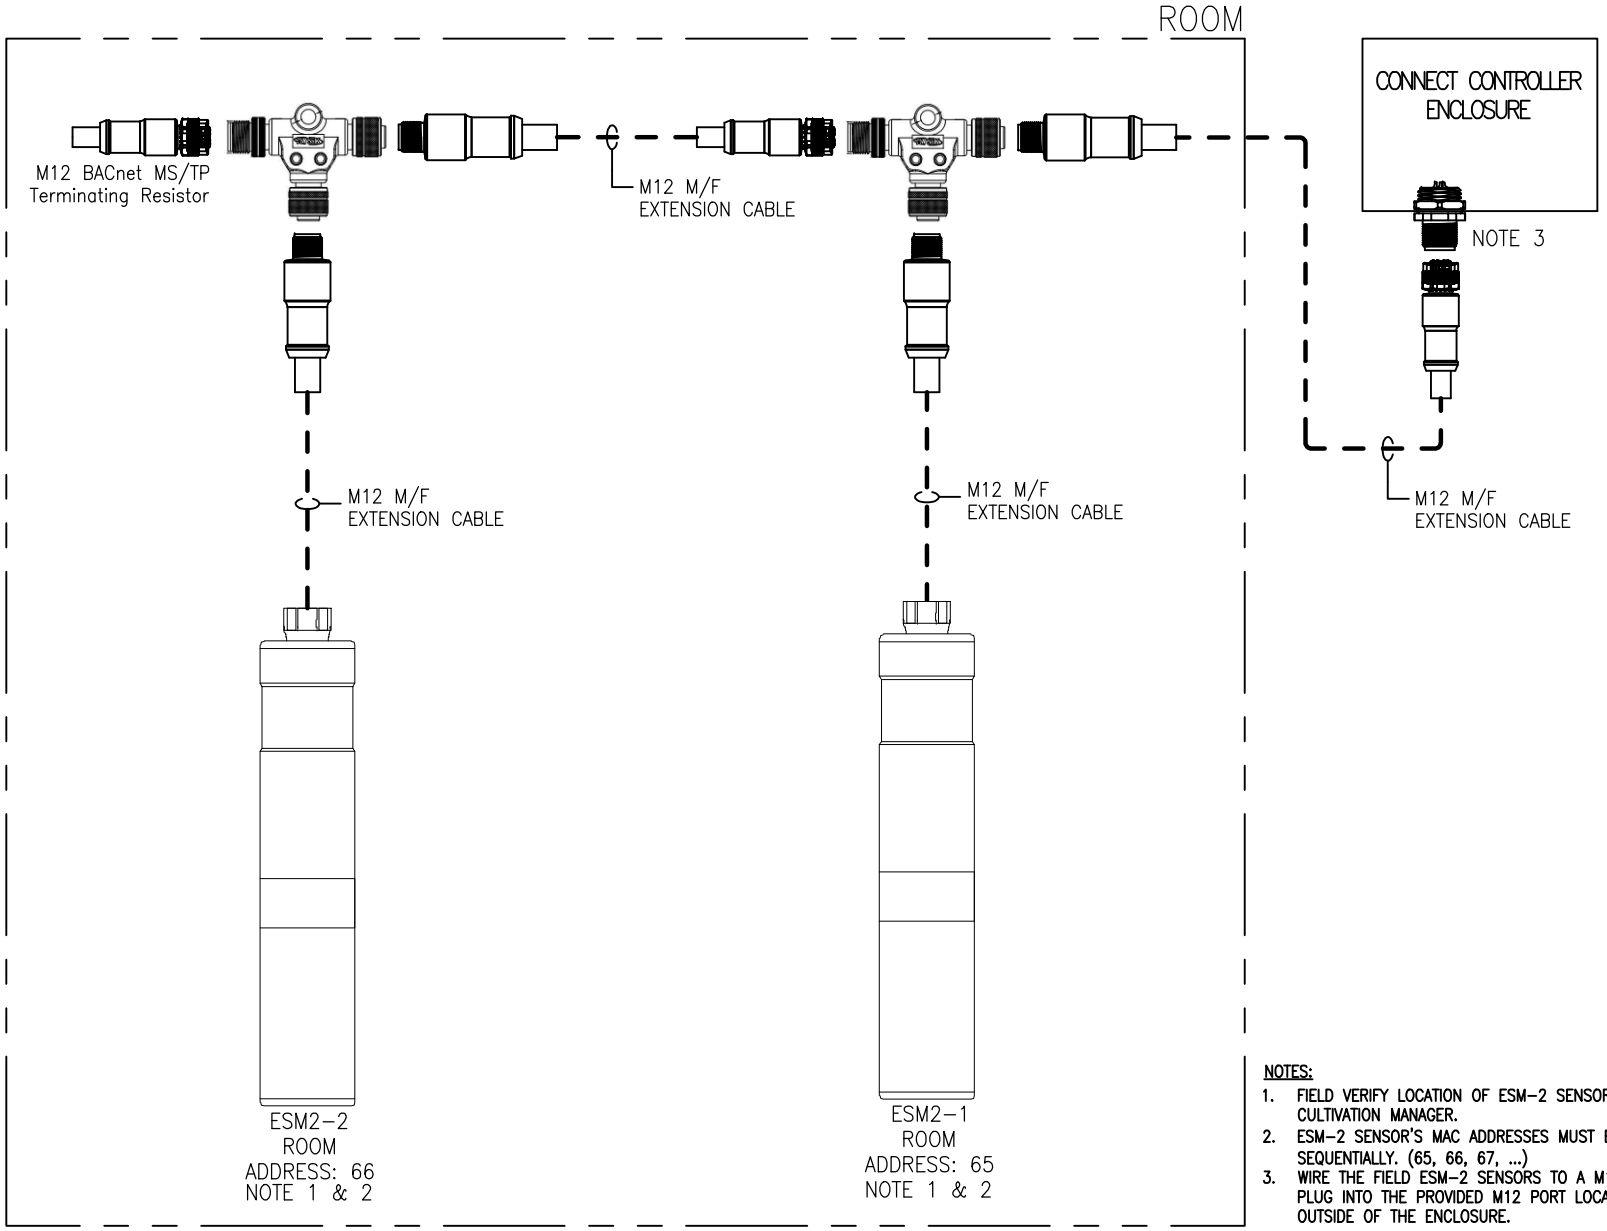

NOTES:

1. FIELD VERIFY LOCATION OF ESM-2 SENSORS WITH CULTIVATION MANAGER.
2. ESM-2 SENSOR'S MAC ADDRESSES MUST BE INSTALLED SEQUENTIALLY. (65, 66, 67, ...)
3. WIRE THE FIELD ESM-2 SENSORS TO A M12 CABLE AND PLUG INTO THE PROVIDED M12 PORT LOCATED ON THE OUTSIDE OF THE ENCLOSURE.